

Quick Reference

Follow these steps to get started copying, playing and recording VHS tapes!



Copy Copy a Tape


1. Insert Tape in Deck 1
(The one you want to copy!)
2. Insert Tape in Deck 2
(The blank tape!)
3. Press COPY TAPE

Play Play a Tape

1. Insert Tape in Deck 1 or Deck 2
2. Press PLAY
(Most rented movies will play automatically when inserted!)

Record Record a TV Show

1. Insert Tape in Deck 1 or Deck 2
(The tape must have a record safety tab!)
2. Select Channel to Record
(On the VCR! The TV should be set to channel 3!)
3. Press REC

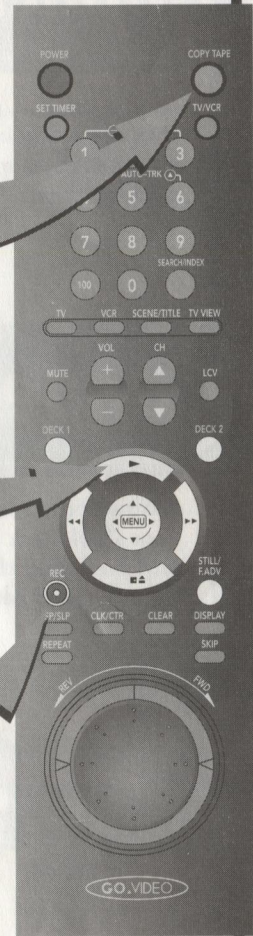

Questions?



DO NOT RETURN THIS PRODUCT TO THE STORE!

Our Award-Winning Customer Service Professionals are Ready to Help!

E-Mail Us!

For a Prompt Reply

vcrhelp@sensoryscience.com

Check Our Website!

For the Latest Support Information

www.govideo.com

Or Call Us!


 
 

For Fast, Friendly Service

1-800-SENSORY

Unpacking

As you unpack, please check that the following items are included in your Dual-Deck VCR packing case:

- Dual-Deck VCR
- User's Guide
- Warranty Registration Card
- RF Antenna Cable
- Remote Control
- 1.5V "AA" Batteries (2)

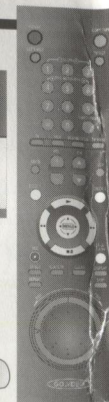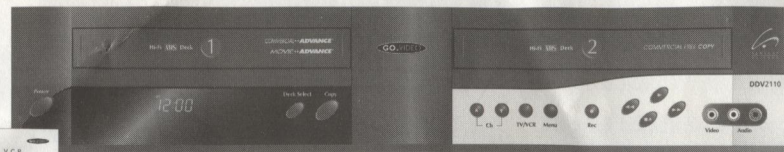


Connections

Follow these steps to set up your Dual-Deck VCR for the first time. See the User's Guide for advanced setup options.

1 Insert Remote Batteries


Remove the rear cover and insert the two supplied batteries, paying attention to the correct polarities (+ and -)

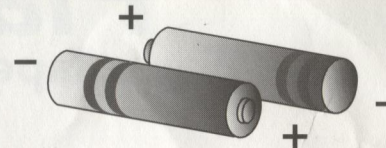

2 Connect Dual-Deck VCR

Connect your antenna or CATV cable INTO the Dual-Deck VCR, and connect the supplied RF antenna cable OUT TO your TV.

From Antenna or Cable TV

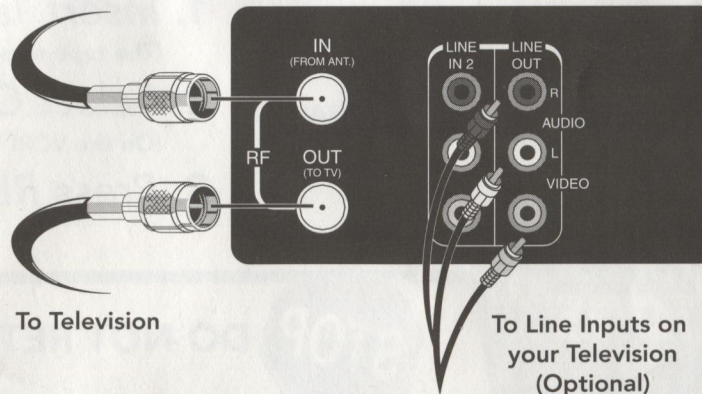

To Television

To Line Inputs on your Television (Optional)

3 Run Auto Setup

Set the CH switch and your TV to the same channel (3 or 4), then follow the easy on-screen instructions to set the language, channels and clock.

POWER

 Set TV to Channel 3!

